 




# INSTRUCTION MANUAL

**SHARE THE VIEW:**  
Take a video using the product with #XMAXVAPORIZER and we will share it with our global family.

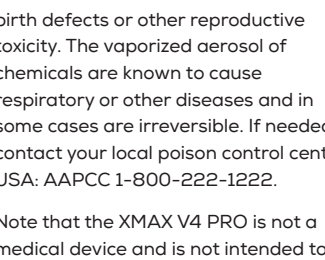

**BATTERY HEALTH NOTE**  
PLEASE DO NOT PUT THIS PRODUCT AWAY OR LEAVE IT FOR EXTENDED PERIODS OF TIME WITH A LOW CHARGE. IF THE BATTERY FALLS BELOW 2% AND IS LEFT THAT WAY THEN IT WILL NO LONGER ACCEPT A CHARGE.

birth defects or other reproductive toxicity. The vaporized aerosol of chemicals are known to cause respiratory or other diseases and in some cases are irreversible. If needed contact your local poison control center. USA: AAPCC 1-800-222-1222.

Note that the XMAX V4 PRO is not a medical device and is not intended to administer medicinal or illegal substances of any kind, diagnose, cure, treat or prevent any diseases or other conditions.

Any illegal use of this device could subject the user to severe fines, penalties and/or imprisonment under the law of their (and/or other) jurisdictions.

THIS PRODUCT DOES NOT CONTAIN ANY BOTANICAL MATERIAL.

2

## DISCLAIMER

Thank you for purchasing the XMAX V4 PRO. To ensure the best experience, please read and understand the instructions fully before your first use of the XMAX V4 PRO. We strongly recommend you keep these instructions for future reference.

 
We hope you enjoy the excellent quality and performance of your new XMAX V4 PRO.

User must be of legal age within any given jurisdiction to purchase or use the XMAX V4 PRO, use this product in moderation. This product should not be used by a child, while driving or operating heavy machinery, minors, or women who are pregnant and/or breast feeding and those with life threatening illnesses without first consulting a doctor.

California Prop 65 WARNING: This product contains chemicals known by the state of California to cause cancer

1

## XMAX V4 PRO OVERVIEW

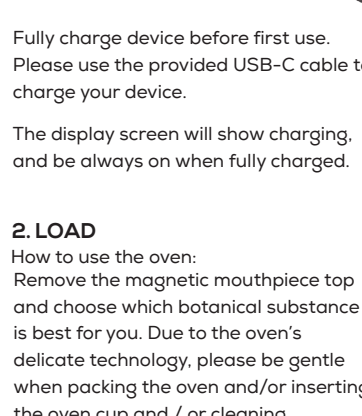


3

## OPERATION GUIDE

 **Notice:** Please remove protection tab in battery compartment before using.

### 1. CHARGE

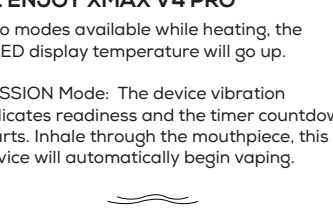

Fully charge device before first use. Please use the provided USB-C cable to charge your device.

The display screen will show charging, and be always on when fully charged.

### 2. LOAD

How to use the oven:  
Remove the magnetic mouthpiece top and choose which botanical substance is best for you. Due to the oven's delicate technology, please be gentle when packing the oven and/or inserting the oven cup and / or cleaning.

5

heat up under the default settings or your last temperature setting.

 
Under "ON DEMAND" mode, the device will automatically become "STANDBY" mode if not being used within 30 seconds. Then it will automatically power off if not being used within the next 120 seconds.

Click the power button 3 times to turn off and the XMAX V4 PRO will vibrate to indicate shut down.

### 4. ENJOY XMAX V4 PRO

Two modes available while heating, the OLED display temperature will go up.

SESSION Mode: The device vibration indicates readiness and the timer countdown starts. Inhale through the mouthpiece, this device will automatically begin vaping.

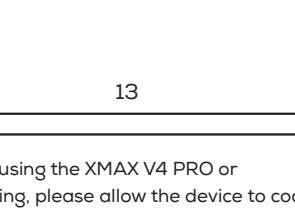


7

XMAX V4 PRO has 2 session timers, 4 minutes and 6 minutes.



 
To switchover the 4 minutes and 6 minutes, just hold the "power button" and "up button" at the same time for 2 seconds.

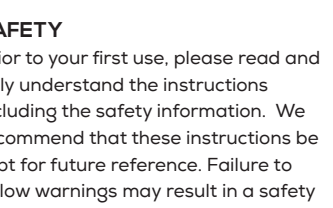

9

### 7. FAHRENHEIT AND CELSIUS SWITCHOVER

 
To switchover to fahrenheit, hold the "power button" and "down button" at the same time for 2 seconds.

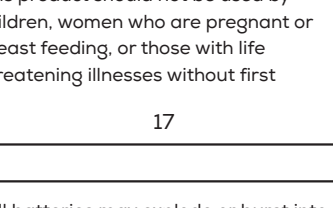

7


### 10. SCREEN FLIP

 Hold the up button and down button and power button simultaneously once.

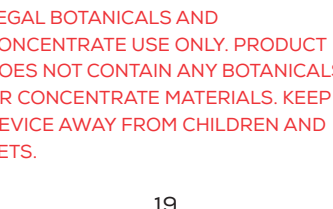

### 11. ADJUST AIRFLOW

 Push the air adjustment button up and down to adjust the smoothness of the airflow.

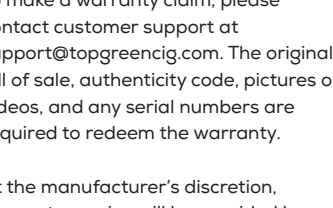

11

For deep cleaning, immerse all pieces in isopropyl alcohol for 10-20 minutes, rinse thoroughly with clean water and dry before reassembling.

1. Metal oven cleaning: use brush to sweep inside and cotton swab dipped in isopropyl alcohol.



\* Tip: Perform a burnoff cycle at max temp for 2 minutes after cleaning.

2. Replace the oven mesh screen:  
(1) Please use the cleaning tool slowly remove the mesh screen along the wall of the oven.

13

After using the XMAX V4 PRO or charging, please allow the device to cool down before storage. It should be stored in a clean, dry place protected against the effects of weather and out of the reach of children and pets. If you have any concerns or if there is any problem, please switch off the XMAX V4 PRO and/or remove it from the charger immediately. Do not try to remedy any defect yourself. Contact our customer service directly at support@topgreencig.com.

15

## SAFETY

Prior to your first use, please read and fully understand the instructions including the safety information. We recommend that these instructions be kept for future reference. Failure to follow warnings may result in a safety hazard including electric shock, fire, property damage, bodily injury or death.

### AGE

You must be of legal age in your jurisdiction to purchase or use the XMAX V4 PRO. For adult use only.

### USE

Never use the product before reviewing the manual in its entirety. If any section or topic is unclear prior to use, please contact customer service for clarification.

This product should not be used by children, women who are pregnant or breast feeding, or those with life threatening illnesses without first consulting a doctor.

17

All batteries may explode or burst into flame if used improperly or mistreated. Do not disassemble, puncture tamper, cut, crush, short-circuit, incinerate or expose to water, fire or high temperature above 60°C or 140°F. It is your responsibility to understand the dangers as well as the proper procedures for handling all batteries. Do not dispose of in trash containers nor litter the environment.

Please recycle or dispose according to local safety regulations law. (Suggested to cover terminals with proper insulating tape before disposal.)

**WARNING** THIS PRODUCT IS NOT INTENDED FOR NICOTINE. PRODUCT IS DESIGNED FOR LEGAL BOTANICALS AND CONCENTRATE USE ONLY. PRODUCT DOES NOT CONTAIN ANY BOTANICALS OR CONCENTRATE MATERIALS. KEEP DEVICE AWAY FROM CHILDREN AND PETS.

19

cosmetic damage including but not limited to dents, scratches/chips to finish, and/ or broken plastic parts.

 
Normal product wear and tear is not covered under warranty. Normal performance degradation of batteries is also not covered by the warranty.

To make a warranty claim, please contact customer support at support@topgreencig.com. The original bill of sale, authenticity code, pictures or videos, and any serial numbers are required to redeem the warranty.

At the manufacturer's discretion, warranty service will be provided by repair of the product or exchange of the product and/or part with a new or functionally equivalent product/part.

21

## XMAX V4 PRO CONTENTS

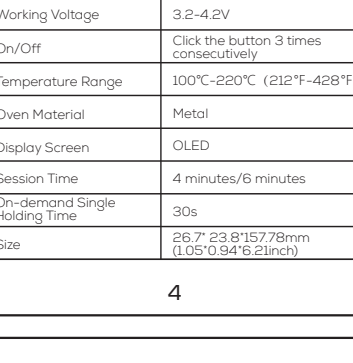


Note: please buy the wax cup separately for use with concentrate.

## SPECIFICATIONS

 
Battery Capacity	18650 3.7V 2550mAh
Charging Voltage/Current	5V/ 1A
Working Voltage	3.2-4.2V
On/Off	Click the button 3 times consecutively
Temperature Range	100°C-220°C (212°F-428°F)
Oven Material	Metal
Display Screen	OLED
Session Time	4 minutes/6 minutes
On-demand Single Holding Time	30s
Size	26.7* 23.8*15.7/8mm (1.05*0.94*0.62inch)

4

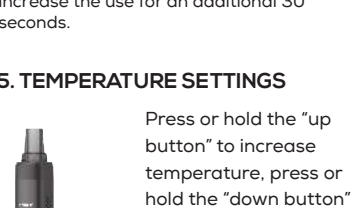

**Botanical Flower:**  
Loosely pack the ground substance in the oven chamber, do not let the substance beyond the top of the oven chamber.

 **Dosing capsule:**  
Open the cap of the dosing capsule, load the desired substance into the dosing capsule, then insert the dosing capsule into the oven chamber.

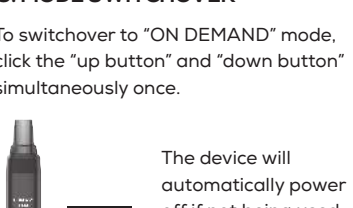

**Do not over load the cup chamber. The recommended fill is approximately half of the cup capacity's area.**

### 3. POWER ON/OFF

 
Click power button 3 times, the XMAX V4 PRO will be powered on and begin to

6

ON DEMAND Mode: Keep pressing the "power button" to heat up, "ON DEMAND" will flash as well, the device will vibrate when reach the setting temperature and ready for inhale. The device will vibrate 3 times and auto suspend heating after 30s, please keep pressing the "power button" again to increase the use for an additional 30 seconds.

### 5. TEMPERATURE SETTINGS

Press or hold the "up button" to increase temperature, press or hold the "down button" to decrease temperature.

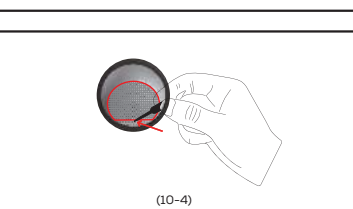


Click to change by degree, hold to change quickly.  
Temperature Range: 100°C-220°C (212°F-428°F)

8

### 8. MODE SWITCHOVER

 To switch to "ON DEMAND" mode, click the "up button" and "down button" simultaneously once.

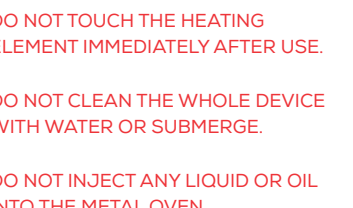

The device will automatically power off if not being used within 120 seconds. Click the "up button" and "down button" simultaneously once, then switchover to "SESSION" mode.

### 9. OLED DISPLAY



Labels on display: Battery level, Session, ON DEMAND, Target temperature, Current temperature, Heating.

 
 
10

### 12. CLEANING & MAINTENANCE


To keep the XMAX V4 PRO working optimally and maintaining the purest taste, we recommend that all parts which come in contact with material or vapor be cleaned regularly.

All removable parts can be disassembled for optimal cleaning.

Mouthpiece & filter  
Gently pull the mouthpiece to remove it. It can be cleaned with soap and water.

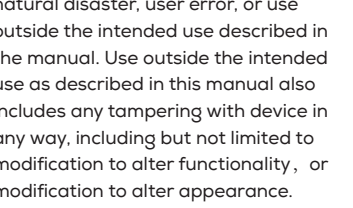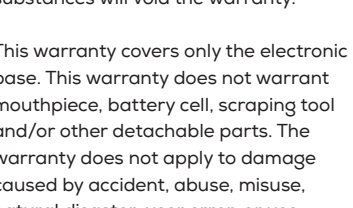

12

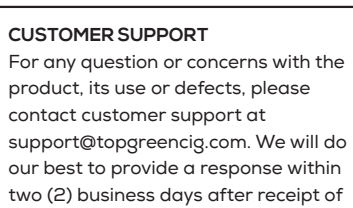 

(2) Put the mesh screen into the oven, then use the cleaning tool to press the screen in the specified position.



14

**NOTE:**  
**DO NOT TOUCH THE HEATING ELEMENT IMMEDIATELY AFTER USE.**  
**DO NOT CLEAN THE WHOLE DEVICE WITH WATER OR SUBMERGE.**  
**DO NOT INJECT ANY LIQUID OR OIL INTO THE METAL OVEN.**  
**MAKE SURE TO DEACTIVATE THE DEVICE BY LOCKING. MAKE SURE IT HAS NOT BEEN USED FOR AT LEAST 30 MINUTES AND IS COMPLETELY COOLED OFF.**  
**WARNING: HOT TEMPERATURES**  
**USE ORIGINAL BATTERIES ONLY**

16

consulting a doctor. It is recommended that all users consult a doctor prior to use with your chosen herb or concentrate. Note that the XMAX V4 PRO is not a medical device and is not intended to diagnose, cure, treat, or prevent any diseases or other medical conditions. XMAX V4 PRO is not intended to administer medicinal or illegal substances of any kind. Any illegal use of this device could subject the user to severe fines, penalties, and/or imprisonment under the laws of your local jurisdiction.

**DAMAGE**  
Immediately discontinue use of the product if the vaporizer unit is damaged in any way including but not limited to: dents, overheating, unusually restrictive airflow, and/or electrical malfunctions. Do not attempt to repair product by disassembly of non-replaceable parts except mouthpiece, Filter, Packing Tool, and Removable Battery. Please contact customer service for help with any damaged unit.

18

### LIMITED WARRANTY

The product is warranted for a period of 12 months from purchase with receipt, or 12 months from date of manufacture without receipt against defects in manufacturing, workmanship, and materials. This device is designed for the use of legal herb and concentrates only. Any use of the XMAX V4 PRO with illegal substances will void the warranty.

This warranty covers only the electronic base. This warranty does not warrant mouthpiece, battery cell, scraping tool and/or other detachable parts. The warranty does not apply to damage caused by accident, abuse, misuse, natural disaster, user error, or use outside the intended use described in the manual. Use outside the intended use as described in this manual also includes any tampering with device in any way, including but not limited to modification to alter functionality, or modification to alter appearance.

The warranty also does not apply to

20

### CUSTOMER SUPPORT

For any question or concerns with the product, its use or defects, please contact customer support at support@topgreencig.com. We will do our best to provide a response within two (2) business days after receipt of written notice.

22