

Thank you for choosing FOCUS V. For your consideration,
please use the QR Codes below to view our line of
products and accessories.



FOCUS V

AERIS

User Manual



AERIS

Welcome to the Focus V family. Purchasing an AERIS signifies the beginning of an unparalleled consumption experience. We've crafted this manual to ensure you get the most from your device. As you explore its many features, we invite you to share your journey with the broader community using #FocusFamily on social media.

FOCUS V

START UP	1
THE APP	3
TIME AND TEMP SETTING	5
PRESETS	7
SESSION START	9
BATTERY CARE	11
CLEANING	13
TIPS AND TRICKS	17
SAFETY INFO	19
WARRANTY	21

START UP

Starting Up Your AERIS:

Press the V button five times. The device will display a startup LED animation.

Turning Off Your AERIS:

Press the V button five times.

Standby/Auto Off:

After 5 minutes of no use: LEDs turn off, entering standby mode.

Press any button to exit standby mode.

By default, the device automatically turns off after 10 minutes of inactivity.



CONNECTING TO APP

To connect your device to your smartphone via Bluetooth:

Download the App: Scan the provided code to find the FOCUS V app. Install on your smartphone.

Turn On AERIS: Power up your device.

Required Services: Ensure Bluetooth and Location services are enabled on your phone.

Launch & Connect: Start the FOCUS V app. The app will auto-search and prompt you to select "AERIS".

Confirmation: Both the app and device will indicate a successful connection.

Take Control: You can now use the app to customize / manage your AERIS.

Available on:



Earn XP, get new device features, better performance, exclusive deals, and more!




REMOVEABLE INSERT

THE INSERT IS DELICATE. USE CAUTION WHEN HANDLING.

To remove the ceramic insert front silicone shell, place on sturdy surface and push firmly from above with both thumbs above the intake holes.

The ceramic insert is removable for cleaning or replacement. Use care when removing or installing the insert.

WARNING: DO NOT TOUCH INSERT WHILE HOT
ALLOW THE INSERT TO COOL BEFORE HANDLING

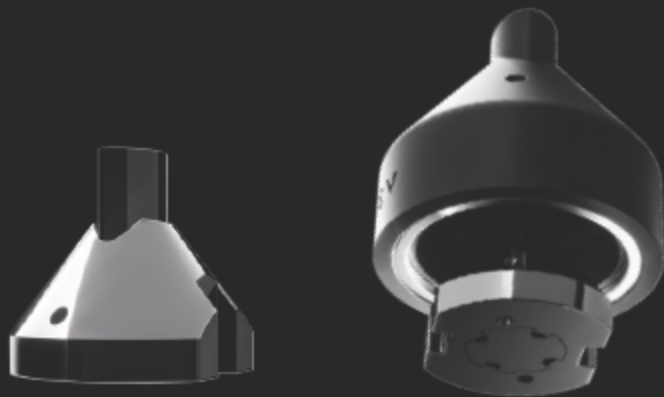

LED AND SESH PRESETS

Adjusting Sesh Presets

Press the V button once to display the color of your current preset. Press it again to switch to the next preset.

Adjusting LED Presets

Your Focus V AERIS has five LED presets available to select from.

Press the V button three times rapidly to cycle your saved LED animations.



Customize your SESH and LED presets with the FOCUS V app.

Concentrate Presets:

- 1: **BLUE** 425F, 30 sec.
- 2: **YELLOW** 445F, 30 sec.
- 3: **GREEN** 485F, 30 sec.
- 4: **PURPLE** 515F, 30 sec.
- 5: **RED** 550F, 30 sec.



Concentrate
365°F - 600°F
20s - 60s

Herb Presets:

- 1: **BLUE** 330F, 1 min
- 2: **YELLOW** 350F, 1 min
- 3: **GREEN** 370F, 1 min
- 4: **PURPLE** 390F, 1 min
- 5: **RED** 410F, 1 min



Herb
275°F - 500°F
2min - 4min

START YOUR SESSION

After powering on AERIS and configuring your session settings, double-tap the V button to start your session. Your AERIS will vibrate, and the LED indicators will signal the session has started.

Upon reaching the chosen temperature, the device will vibrate again, signaling the start of your session's countdown.

NOTE:

During the session sequence, you can double click the V button to extend the session by 10 seconds.

To cancel your session, press the V button once anytime during the countdown sequence.



V button function:

- 1 click = cycle temp preset/cancel sesh
- 2 clicks = start/extend sesh
- 3 clicks = cycle LED preset
- 4 clicks = check battery level
- 5 clicks = ON/OFF

Battery level indicator:

- GREEN** $\geq 75\%$
- BLUE** $\geq 50\%$
- YELLOW** $\geq 25\%$
- RED** $\geq 10\%$

BATTERY AND CHARGING

NOTE: ALWAYS FULLY CHARGE THE DEVICE BEFORE USING FOR THE FIRST TIME

SPECS:

Li-ion Polymer Battery
800mAh - 7.4V

Charging current should not exceed 5V/2A.
Only use approved AC/DC adapter.

Safety & Handling

- Avoid direct sunlight, heat, or fire.
- Do not remove, disassemble, or modify the battery.
- Avoid excessive physical shock or vibration.
- Do not immerse in water.
- Keep in a cool, dry and well-ventilated environment.
- Only use the approved, appropriate power source.
- Do not charge the battery for more than 4 hours.
- The battery should be charged within proper temperature, current, and voltage ranges specified.
- Please follow local regulations for proper disposal of batteries.



CLEANING

MAKE SURE THE ATOMIZER IS COOL AND SAFE TO TOUCH BEFORE HANDLING

Regular cleaning and maintenance are essential for the optimal performance and longevity of your FOCUS V AERIS. After every dab, make sure to swab away excess material. This will minimize the need for frequent deep cleaning, as outlined below.

Scan the QR code to view our video guide.



Cleaning Part 1: Mouthpiece

Ensure your Focus V AERIS is powered off before starting the cleaning process.

Gently remove the mouthpiece from the Main Body

Remove the glass insert from the silicone shell and wipe both with 70% Isopropyl Alcohol. The glass insert may be soaked in Isopropyl Alcohol for deeper cleaning.

Rinse with water, and dry. Align tabs to match desired airpath and reinstall glass insert into silicone shell.

Cleaning Part 2: Main Body

Ensure the mouthpiece is already detached before beginning the cleaning process.

First, unscrew the atomizer from the Main Body by turning it counterclockwise.

Dampen a lint-free wipe with 70% isopropyl alcohol, and gently clean any visible residues from the Main Body. Be quick to dry the Main Body immediately after.

Pay special attention to the atomizer contacts and airpath. A cotton swab dipped in Isopropyl Alcohol works best to clean these areas.

Be gentle around the electrical contacts and V button of the Main Body.

Finish by wiping down with a dry lint-free cloth.

Cleaning Part 3: Atomizer

Before you begin, ensure you have 70% Isopropyl Alcohol on hand.

With atomizer removed, start by gently cleaning the threads of your INTELLICORE atomizer using a cotton swab moistened with the Isopropyl Alcohol.

Detach any silicone accessories from the atomizer. Delicately swab the inside of the atomizer insert with Isopropyl Alcohol.

Submerge the atomizer in the Isopropyl Alcohol and soak for 5 minutes. Gentle agitation can help in more thorough cleaning.

After soaking, remove the atomizer and let it air-dry. Inspect closely; if residues persist, repeating the process until clean.

Once completely dry and cleaned, reassemble your atomizer. Ensure all components are secure and fully dried. We suggest running a brief, low-temperature test session to ensure proper operation after reassembly.

TIPS & TRICKS

Loading:

- The recommended loading size is 0.1 to 0.3g to avoid overfilling.
- Place the material at the bottom of your chamber.
- We recommend using an electronic dab tool like the FOCUS V SABER.

Inhaling:

- Keep the device upright during and after operation.
- Short, smooth pulls provide the most consistent vapor production.
- If airflow is restricted, make sure the atomizer and insert are clean and clear from obstructions.
- If you want to modulate airflow, you can do so by slightly covering your carb cap opening.
- Adjust your timer settings to properly match the length of your hit to save battery life and prevent overheating.

Clean Up:

- Keep your chamber clean by using a swab to absorb leftover residue after every session.
- Warm isopropyl alcohol works better at dissolving residue.
- Check your atomizer contacts and airpath regularly.
- Never use abrasives or highly caustic cleaners on your device.

Battery Care:

- Make sure the device is off when not in use.
- Keeping the battery from discharging below 60% will prolong the lifespan of the cells.
- Do not charge longer than is needed.
- Only use an approved USB power source.

IMPORTANT SAFETY INFORMATION

Use at your own risk.

Do not blow into the mouthpiece attached to your AERIS's Main Body.

Do not remove the silicone in your Main Body. Removal of the silicone will automatically nullify and void your AERIS's warranty.

Do not overload the wax chamber. Overflow of concentrate can cause spill over to the atomizer, damaging heating element.

To avoid damage, please keep the interior of your atomizer cleaned and properly maintained.

Allow the chamber adequate time to cool before touching it.

Never touch your atomizer while it is in use.

Do not overcharge your battery/device. Never use a damaged battery/device.

Never leave the device charging unattended.

Never expose your batteries/device to extreme temperatures.

Do not expose batteries/device to liquids.

Always charge batteries/device on a fireproof surface.

Immediately stop use if the batteries produce an unusual odor, emit heat, smoke, change in color or shape, or appear irregular in any way.

Keep away from pets and children.

WARRANTY

AERIS Main Body: 1 Year
INTELLI-CORE Atomizer: 6 Months

All claims must be made through FOCUS V Customer Support.

Focus V warrants this device against any defects in materials used to produce this product for a period of one year, from the retail purchase date. This warranty can only be used by the original end-user. If a claim is received and determined to be valid, Focus V will either repair the product defect or exchange the product. The Limited Warranty Period begins on the original purchase date. A claim under this warranty is only eligible if it is made within the claim period.

Defective products must be returned to and received by our warehouse within 30-days of the original delivery. Customers will be responsible to pay for shipping defective products after the 30-day period. We will pay for shipping on all domestic replacement orders to the customers.

*If the product passes inspection upon arrival the customer is required to pay for return shipping.

Visit focusv.com for the full warranty.

This Limited Warranty will NOT apply under the following circumstances:

- If damage is cosmetic, including scratches, dings, etc., or if issue is caused by normal wear and tear. (For example, Limited Warranty does not cover the standard degradation of atomizers or batteries.)
- Where customer's failure to properly maintain the Product is cause of issues. Customers should note that atomizers are replaceable parts with an expected life of 3 – 6 months, and they require regular cleaning and maintenance.
- If Focus V determines that the Product has been improperly used, altered or tampered with in any way. Customer assumes the responsibility to follow instructions provided in user's manual. Examples of misuse include:
Using incorrect charging hardware, Overcharging the unit, Overfilling the unit, Disassembling the Main Body, Subjecting to extreme conditions, etc.
- If customer misrepresents their information, the serial number on the product has been altered, or removed, or if warranty claim is made fraudulently.
- For any Focus V Products that are resold by the customer or that are purchased from unauthorized resellers.

Register your device.



For more help and support, please visit:
<https://support.focusv.com/hc>

Find us online at:

