

On/Off:

- Slide the switch to the right to turn on.
- Switch² has a 15 minute auto shut-off feature. Press any button to wake from sleep mode.
- The 3 LEDs on the back of the device indicate battery level. Pulsing lights indicate less than 10% remaining.

APP Connection - iOS:

- Download the Lablink Browser from www.lablinkbrowser.com
- Copy the following link and paste it into the LabLink browser to access the web app:
<https://drdabber.app/>
- Switch² must be powered on and nearby. Press “Launch” then select your device from the list. Perform any necessary firmware updates.

APP Connection - Android:


- Copy the following link and paste it into the Google Chrome browser to access the web app:
<https://drdabber.app/> [Or Click Here](#)
- Switch² must be powered on and nearby. Press “Launch” then select your device from the list. Perform any necessary firmware updates.

Change Temperature Setting:

- Press the **+ button** to increase temperature, and the **- button** to decrease temperature. The LEDs will change colors to indicate the selected temperature setting.










Activate Heating Cycle:

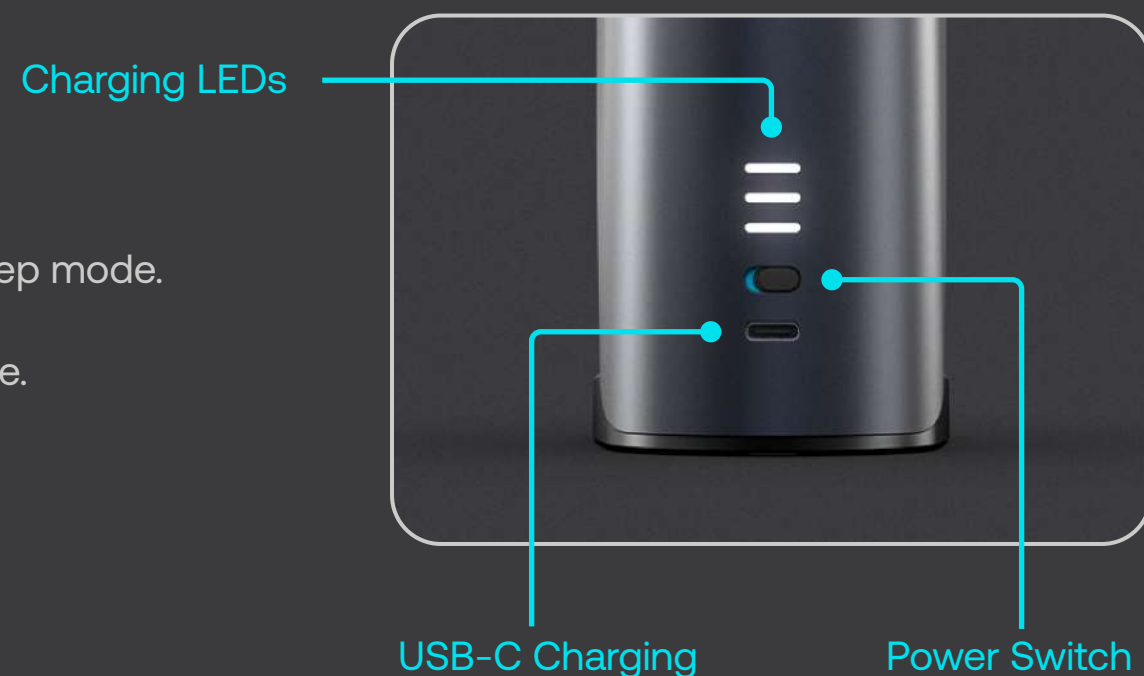- Press the “d” button () once to activate. The LEDs will pulse Red to indicate heating and Green when the Switch2 reaches desired temperature.
- Heating cycle can be cancelled at any time by pressing the button again.
- 3 flashes from the LED band indicate a low battery.

Charging:

- To charge, plug the charging cable into the device. The device can be used while charging. LEDs will pulse White while charging and turn solid when fully charged.



Setting	Default Temperature (°F)	LED
Setting 1	400	 Purple
Setting 2	440	 Blue
 Setting 3	480	 Cyan
Setting 4	500	 Orange
Setting 5	540	 White

 = The Default and Our Recommended Setting



Getting Started

- Use the supplied charger to fully charge your Switch2
- Rest your thumbs on the top of the crown and gently push upward from the bottom of the glass attachment with both hands to remove. **Never pull up from the mouthpiece to remove the glass attachment as it can break and cause injury.**
- Once the glass attachment is removed from the device, fill the attachment up to the top of the percolator puck with water. Filling lower than this point will affect vapor quality.
- Gently push the glass attachment back down into place, ensuring that the markings on the attachment and the device are lined up. This will align the glass with the vapor pathway.
- Lift off the magnetic carb cap and load your concentrate into the insert with the supplied Drop loading tool. It is very important to avoid putting the tip of the loading tool directly in the insert. Hover the loading tool above the insert and press the button to heat the concentrate on the tip and drop it into the insert. Do not scrape the tool on the edge of the insert as the electronics in Switch 2 can be damaged if the battery powered Drop comes in contact with the induction field.
- Place the carb cap back on the insert to seal the induction well.
- Your device is now ready to use! You can either use the +/- buttons on Switch2 or the app to choose your temperature, then just hit the button to begin the heating cycle.

Push From Bottom



Alignment Lines

Cleaning Tips


- We recommend swabbing your insert with Iso-Snaps or cotton swabs after every use for optimal flavor and longevity.
- If you need to remove the insert for deeper cleaning, remove the glass attachment and set it down on a stable surface, then gently pry off the aluminum crown to reveal the induction well. Always use the supplied tweezers to remove the insert and be very careful when removing, as both the quartz and the sapphire inserts are very fragile and can break easily.
- **Removing the insert is not required for regular maintenance and is only recommended when absolutely necessary. NEVER remove the insert when it is hot. Wait for the device to cool down after use before removing to avoid burns.**
- We recommend using 99% isopropyl alcohol to clean the glass attachment. Ensure your attachment is thoroughly rinsed with clean water and refilled before using again.
- Do **NOT** use isopropyl alcohol on the outer shell of Switch2 as it will damage the Blue Onyx finish. If necessary, use a damp paper towel with a small amount of dish soap to wipe down the body, making sure to avoid water entering the charging port.



For more information go to: <https://drdabber.helpscoutdocs.com/article/126-switch2-knowledge-base>

Enter the same account details you use on drdabber.com

If you do not already have an account on drdabber.com, create an account to link your Switch2

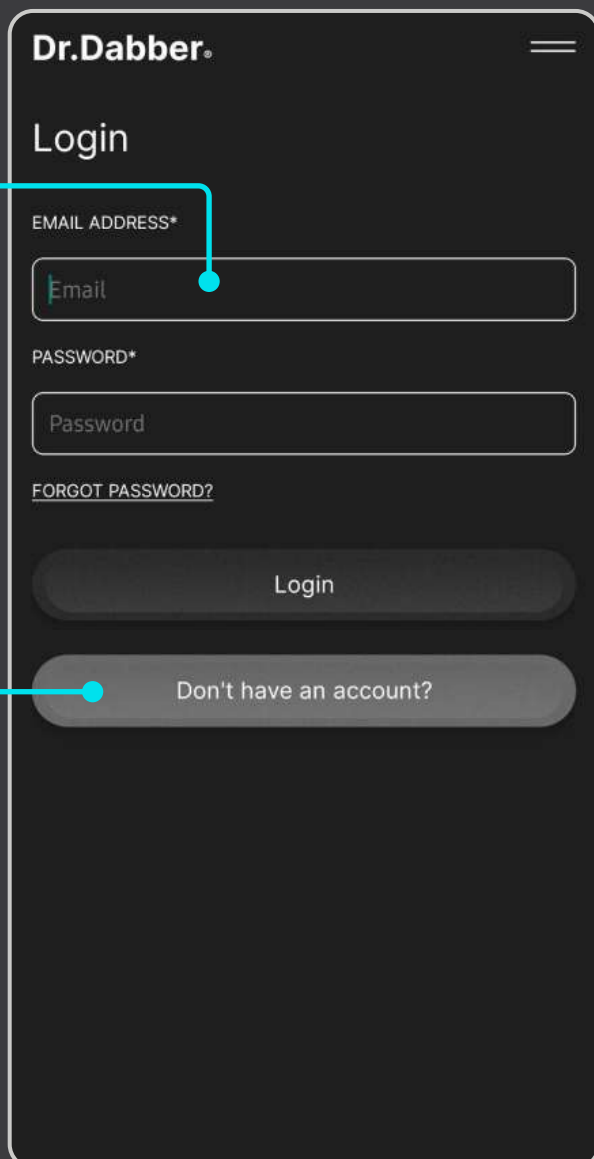


Tap here to access device settings

Tap here to access your analytics

Press to start a remote heating cycle

Use the plus and minus buttons to change temperature

This page will show all information about how you use your Switch2

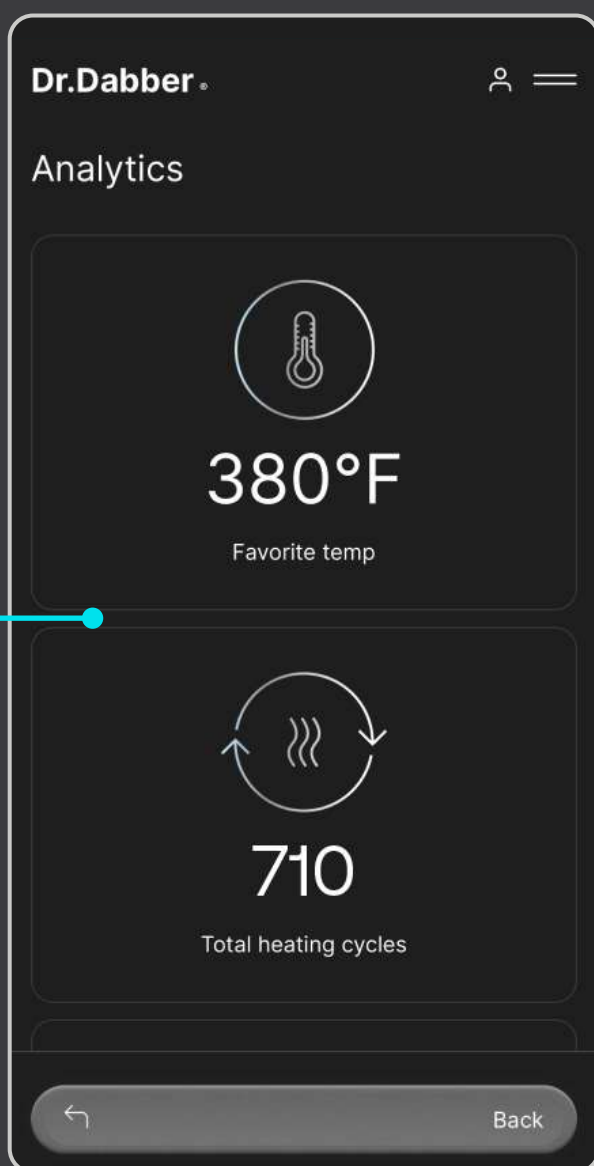

Tap here to access your temperature presets


Tap here to choose Dynamic Heating mode

Tap to select heating profile

Press and hold to customize heating profile

Tap to reset your customized settings to default

Tap to generate a code to share your heating profile with friends or to enter a code you have received

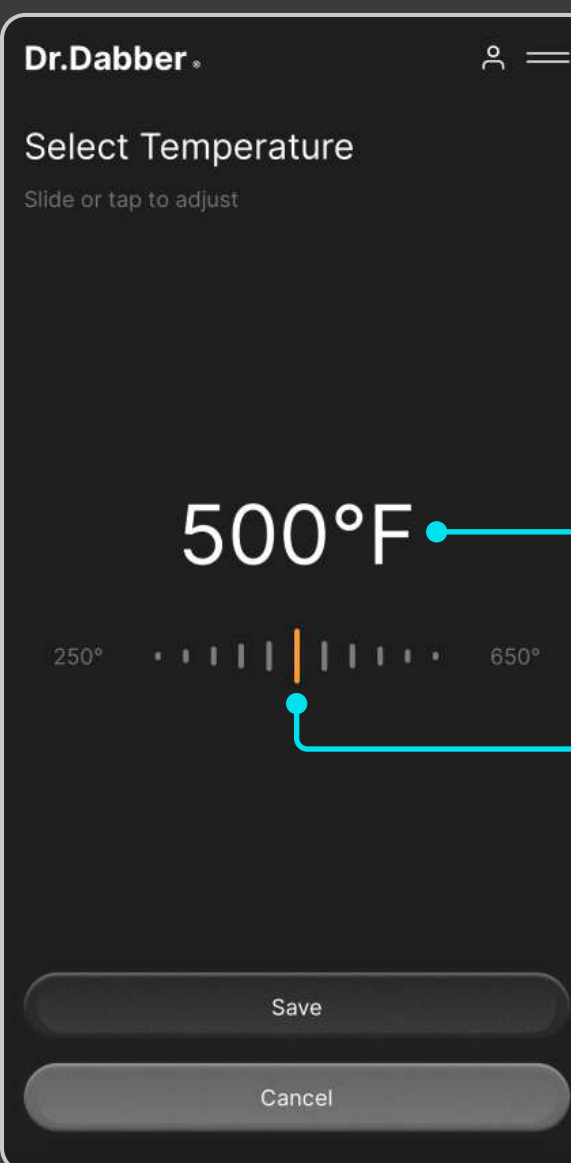


You can manually enter a temperature by tapping here

To customize a temperature preset, swipe left or right to adjust temperature, then click save

Tap here to choose your ambient light mode

Tap here to adjust the hold time of your switch2

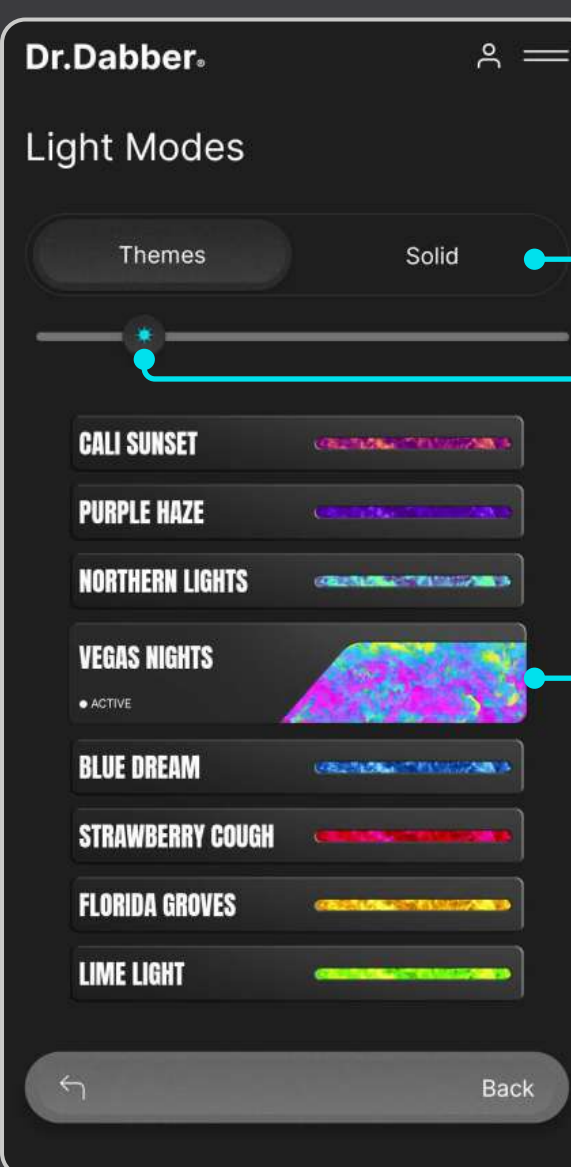

Tap here to access Solid colors

Slide left or right to change brightness. Slide all the way to the left to activate stealth mode


Tap any theme to change the lights on your switch2



Tap to manually enter hold time

Swipe left or right to change hold time

Tap to save hold time settings

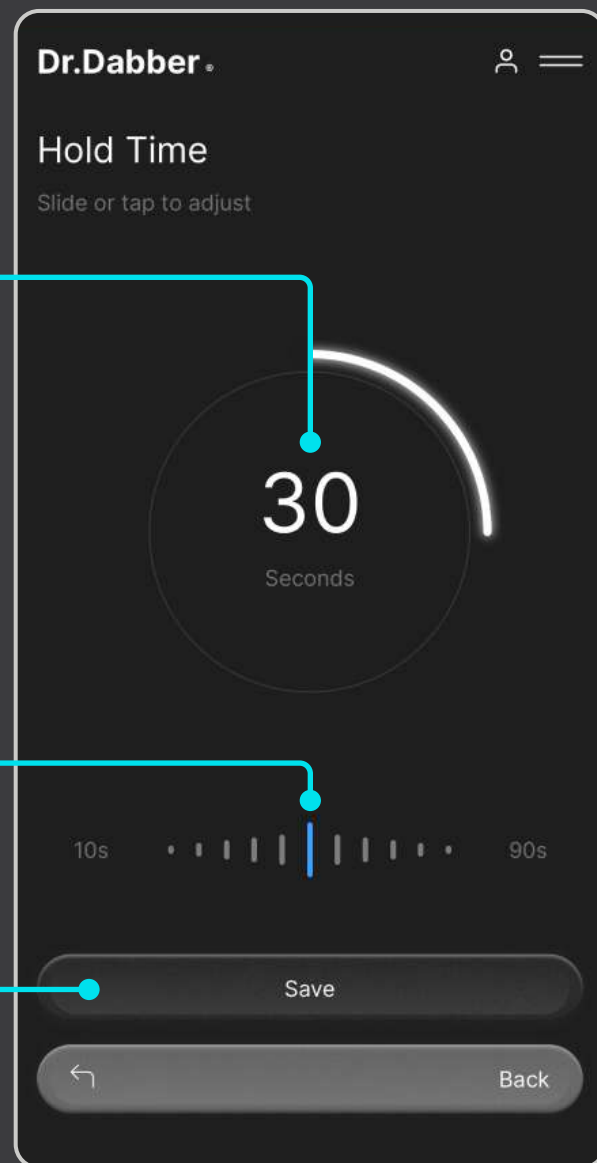

Name your device here

See all your device info here

Tap to adjust when Switch2 goes into sleep mode

Tap to reset switch2 to factory settings



For more information go to: <https://drdabber.helpscoutdocs.com/article/126-switch2-knowledge-base>

