


Pocket




INSTRUCTION MANUAL

Specification :

Size: 26*34.4*93.2mm
 Display: OLED Display
 Temperature Range: 400-580°F
 Coil Resistance: >0.2Ω
 Preheat: 10 Seconds
 Session Timer: 15s-60s
 Vibration Reminder: Yes
 Charging Type: 5V/1A Type-C
 Battery Capacity: 1400mAh
 Charging Time: 1.5h

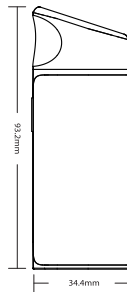

Pocket Exploded View :

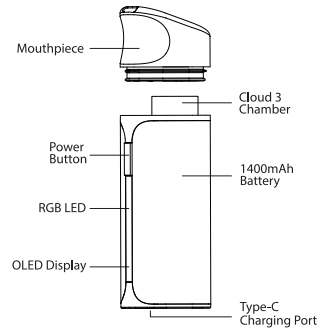

- 1 -

Package Content :

1x Pocket (Cloud 3 coil pre-installed)
 1x Pick Tool
 1x 4 Feet USB-C Cable
 1x Instruction Manual
 1x Owner's Manual
 12x Terp Ball
 4x Q-tip


How To Use :

1. Add Pearls And Concentrate :



Flip open the mouthpiece and fill the terp ball and concentrate into the Cloud 3 Chamber, and securely close the lid.

2. Turn on/off :

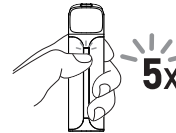

Quickly click the power button 5 times within 2 seconds.

- 2 -



yocanblack.com

Original and Exclusive Manufacturer:
 Shenzhen Yocan Technology Co.,Ltd



3. Change Temperatur :



Click power button 3 times to enter into Temperature Change Mode, click power button 1 time to increase by 1F.

4. Start Or Stop Session :



Click power button for 2 times to start preheating, device will vibrate once when start preheat and vibrate again when ready, dab time lasts 45 seconds. Device vibrate once when session finished.

5. Change Session Timer :



Click power button 4 times to enter into Session Timer Change Mode, click power button 1 time to increase by 1 second.

- 3 -

6. Reset Puff Counter :



Quickly click power button for 7 times.

7. Clean :



Clean Cloud 3 Chamber after each use with a Q-tip, wipe gently in a circular motion while chamber is warm.

8. Charging :

Type-C port, Fast charging not supported. Charging time around 1.5 hour.

- 4 -

	Power On.
	Power OFF.
	Cloud 3 Chamber.
	Change Temperature.
	Heating.
	Change Session Timer.
	Reset Puff Counter.
	Smoking Overtime Protection.
	Cloud 3 Chamber Not Connected. Short Circuit.
	No Sensor Error.
	Resistance <0.2Ω. Please Charge the Device.

- 5 -

Caution :

Keep the device away from any environment involving strong acids, alkaline, combustible materials, water, or any other liquids. Do not keep in hot cars or store above the room temperature of 74°F. Do not use damaged batteries. If the battery casing is damaged, discontinue use and safely recycle the battery. Do not use the battery if contacts become exposed to solid or liquid matter. Shorts can result in fire or an explosion of a battery. Do not touch coils when hot. Severe burns can result. Do not touch hot material. Severe burns can result. If the device gets too hot in use, please stop using it for a while. Not intended for tobacco or nicotine use. Not an ENDS device.

Disclaimers :

People under 21 years of age are not permitted to purchase or use this device. Non-smokers, children, and women breastfeeding should not use this product. The device is not a medical device and is not intended to diagnose, cure or prevent any diseases or other conditions. The manufacturers and sellers will not be responsible for any consequential or incidental damage resulting from the sale or use of any merchandise.

- 6 -